

information you can use



Service Schedule

All new STINGRAY® Parts Washers come with a Maintenance Service Schedule inside the electrical-control panel. Following the Service Schedule maintains your warranty and is the best way to prevent un-wanted downtime. If you need a new schedule, please contact MART Tech Services for the current schedule. This overview of the standard Maintenance Schedule is based on hours of operation.

Every 8 Hours of Operation:

- ð Inspect and clean the Wash Pump Intake Filter. Remove front reservoir cover and clean the filter with a stiff-bristle brush*. Run the brush across the top, back and righthand side of the filter to remove sludge and other materials. Replace reservoir lid.
- ð Grease Turntable Bearings with Lubriplate 1444*. Grease the bearings until fresh grease flows out from the bearing seals and all the wash solution is purged. Note: SR30s and SR40s have hub bearings with a different service schedule.
- Grease PBM Swivel Joint Lubriplate 1444*. with Grease until you see fresh grease coming out of the overflow port on the back side of the swivel joint.



Every 40 Hours of Operation:

Inspect PBM Nozzles. Inspect the PBM Wash Nozzles for clogging. Remove nozzles and clean if required. Verify that your suction filter amua properly in place and not damaged to prevent further clogging.



ð Test Chemical Concentration. Perform a titration test to check your chemical concentration.

Titration Detergent kits* use an acid reactant and The neutralizer. indicator turns red. pink, or blue when added to a sample of



solution. By counting the drops of neutralizer it takes to turn the solution back to its original color; you can determine the chemical concentration.

Titration Testing Guidelines:

- Perform a titration test weekly.
- Contact your Detergent supplier for test kit.
- o Only use a kit designed for your Detergent.
- Follow test kit instructions carefully.
- Add Detergent based on the results of the test.

Call us for titration test kits* for all POWER KLEEN Chemicals. POWER KLEEN Chemicals are specifically formulated and designed for use in your STINGRAY Parts Washer.



information you can use



(Service Schedule, continued)

Every 160 Hours of Operation:



- Check PBM rotation. To inspect, turn the main power supply OFF. Disconnect the PBM linkage from the PBM upper bearing shaft. Push the manifold back and forth. If it does not move freely you may need to inspect or replace the swivel.
- Clean Air Intake on Gas Burner Blower Motor. compressed-air Use a blower or a soft brush to clean the gas burner air intake machines on equipment with gas heat.

 


Wash

ð Measure the Amp Draw Pump(s). Measure at the motor starter and record the amp draw of the wash pump motor(s). Use a clamp on amp meter. Caution! Be sure that only a qualified



electrician performs this maintenance task! If the actual



installed inspect your nozzles for wear. If worn replace the nozzles.

Grease Turntable Drive Bearings with Mobilith XHP222*.



Grease Upper PBM Manifold Bearing with Mobilith XHP222.



NOTE: Do not use any grease other than the type specified for all applications. Lubriplate 1444* for turntable bearings and PBM Swivel and **Mobilith XHP222*** for the remaining grease locations (pump motor, pump bearings, turntable drive bearings, upper PBM manifold bearing.

Using the wrong grease type can damage the bearings and void your warranty. STINGRAY has thoroughly tested various



greases and determined the optimum type for each use. MART Tech Services stocks both types of recommended grease for immediate delivery.

Every 1100 Hours of Operation:

ð Grease Turntable Hub Bearings on SR30 & SR40 machines with 1444*. Lubriplate Remove the turntable and hub rubber cap. Pump the bearings full of



grease through the single grease fitting until fresh grease is seen below the hub.



Service and Support Our offices are open M-F from 8AM to 5PM CST



Did Ydu Know...



information you can use ____

(STINGRAY

(Service Schedule, continued)

 Ö Clean & Inspect Wash Pump Couplings. Remove the coupling guard from the pump and visually inspect the couplings to make sure that they are tightened to the motor and pump shafts and that the elastomeric spider is intact and not broken or torn.

solenoids for proper operation by raising the float ball up and down to simulate low water level. Listen for water fill.



ð Grease Wash Pump and Motor. Refer to the Carver pump manual for proper grease amounts for the pumps. Do NOT over-grease the PUMP bearings. Over greasing can lead to high heat and bearing failure.



For more details please see the STINGRAY Parts Washer Operator's Manual or our website.

*Part Numbers for referenced items

- Stiff Bristle Brush
 85005

 Lubriplate 1444
 51810

 Titration Kit (PK I, IL, II, IIIL)
 22200

 Titration Kit (PK IV & PK V)
 22205

 Mobilith XHP222
 48270
- Of Grease Door Bearings with XHP222*.

 Grease the upper and lower door bearings with Mobilith XHP222 until fresh grease is seen flowing from the bearings.
- ð Oil the ASE & Burner Blower Motors.



Water Solenoids & Float Assembly.
 Remove the float assembly from the box exposing the float ball. Clean the float ball to maintain the proper buoyancy and remove any build-up of sludge from the float ball reservoir. Check water

